






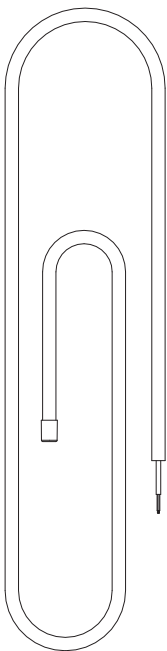

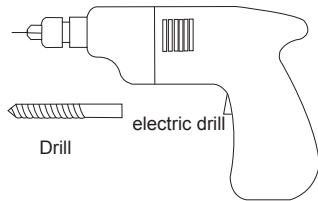



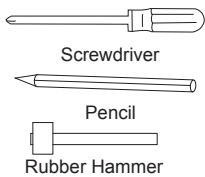

Towel Rail Installation


- Read the instruction sheet carefully before installation.
- Installation should be completed by a professional electrician.
- Please dispose the package properly.

tools required




Decorative cover
x1


	Masonry Screw (St4.8*60)	x4
	Anchor (Φ8*60)	x4
	Fixing Bracket (50*24.5)	x4
	Wall Support Core (φ16*37)	x4
	Allen Wrench (S2.5x60)	x1
	Cone Point Set Screw M5	x5
	Tapping Screw (St4*30)	x2
	Expansion Pipe (Φ8*36.5)	x2

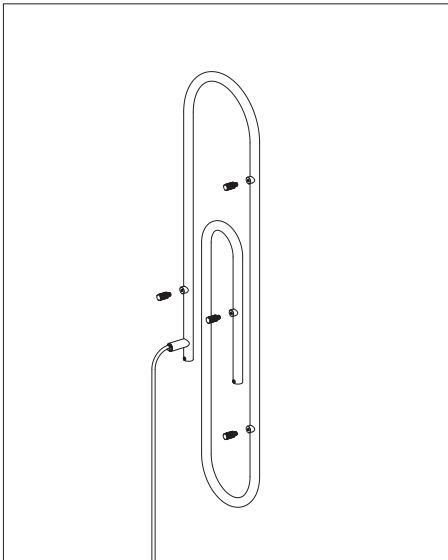


Step1. Put the wall support core into solid fixing lug.

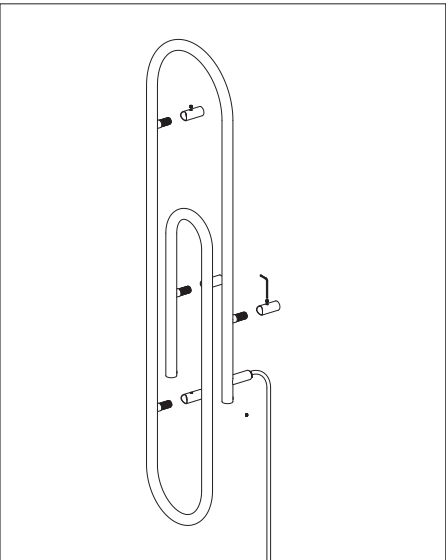


Step2. Use screw fixed wall support core to fixing bracket.

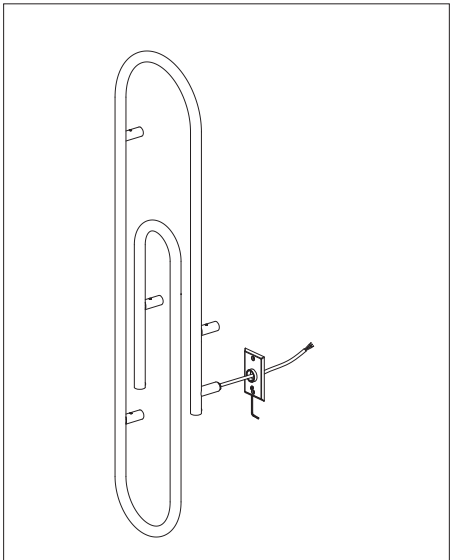


Step3. Get the electric wire through the round decorative tube and decorative cover. Tighten the round decorative tube and element firstly, then tighten the round decorative tube and decorative cover with hexagonal wrench.

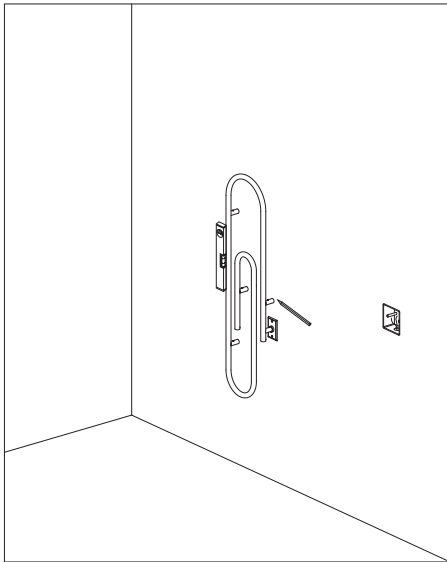


Step4. Position the towel rail and the decorative cover in desired location. Check for level with the spirit level and mark four equal positions for the brackets with a pencil.

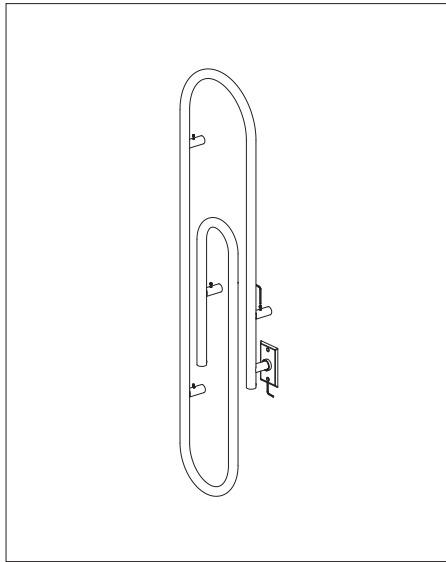


Step5. Unscrew the decorative cover and fixing bracket .

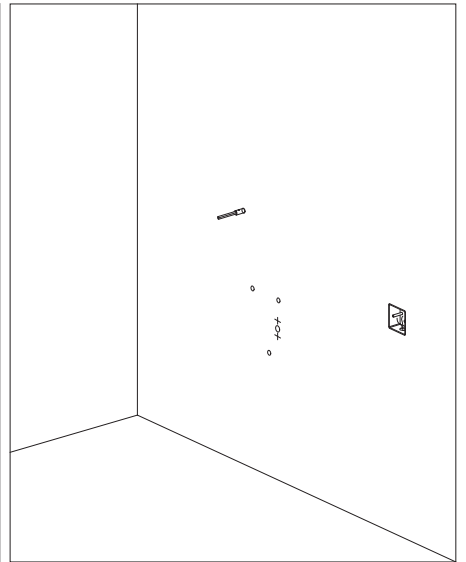


Step6. Use pencil and braket to mark a central point on the wall.

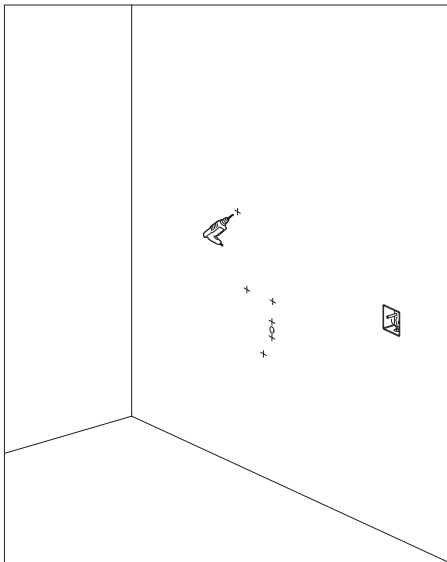


Step7.Drill holes in wall.

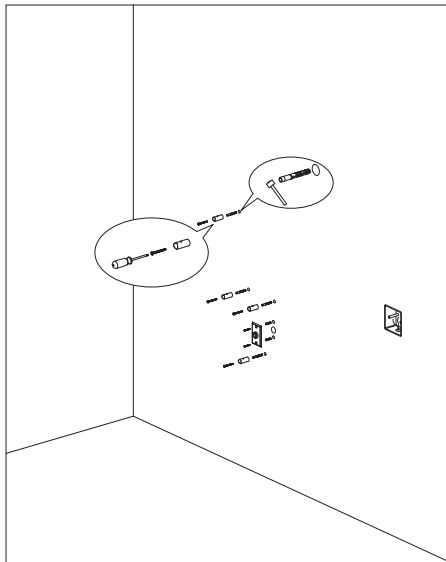


Step8.Insert the anchors to the holes with a rubber hammer and fix the fixing brackets and the decorative cover to the wall with masonry screws.

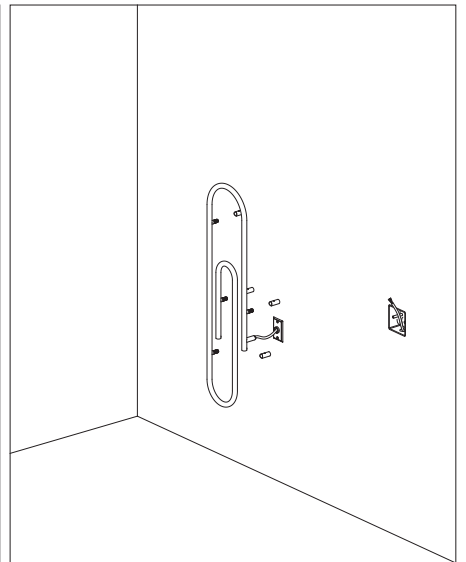

Step9. Get power line through the line pipe installed beforehand.

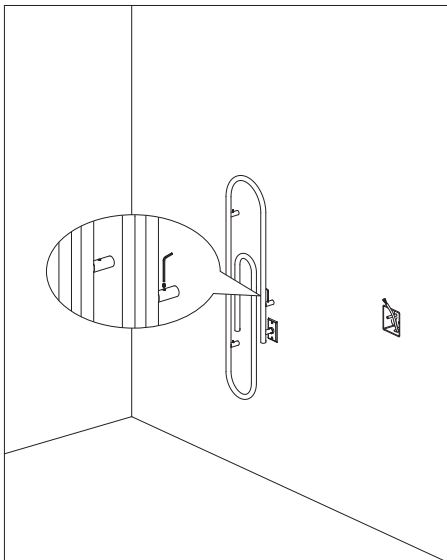

Step10. Install towel warmer on the wall and secure the fixing brackets with screws.

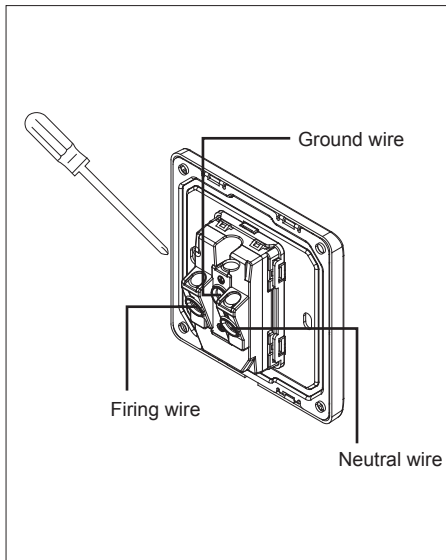

Step11. Connect the wiring with junction box.